

# Gigaset C59H



Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a licensee of the Siemens trademark

© Gigaset Communications GmbH 2009  
All rights reserved. Subject to availability.  
Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)

**SIEMENS**

## The handset at a glance



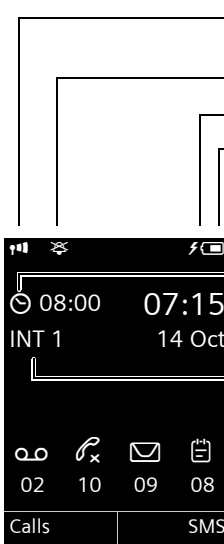
- 1 **Display** in idle status
- 2 **Battery charge status** ( → page 14)
- 3 **Display keys** ( → page 18)
- 4 **Message key** ( → page 32)  
Access to call and message lists;  
Flashes: new message or new call
- 5 **End call key, On/Off key**  
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
Keypad lock on/off (press and hold in idle status);  
toggles between upper/lower case and digits
- 7 **Mute key** ( → page 26)  
Mute the microphone
- 8 **Microphone**
- 9 **Recall key**  
- Consultation call (flash)  
- Insert a dialling pause (press and hold)
- 10 **Star key**  
Ringtone on/off (press and hold);  
with an open connection: switch between pulse dialling/tone dialling (press briefly);  
Text input: Open table of special characters
- 11 **Connection socket for headset** ( → page 15)
- 12 **Key 1**  
Dial network mailbox (press and hold)
- 13 **Talk key**  
Flashes: incoming call;  
Accept a call; open redial list (press briefly);  
start dialling (press and hold)
- 14 **Speaker key**  
Switch between earpiece and speaker mode
- 15 **Control key** ( → page 17)
- 16 **Signal strength** ( → page 14)  
**Green:** Eco Mode activated ( → page 34)







Illustration of handset on a base with SMS functionality.

# Display symbols

---

The following symbols are displayed dependent on the settings and the operating status of your telephone:



Signal strength  ( → page 34)  
or Eco Mode+  icon ( → page 34)  
Ringtone switched off ( → page 39)  
Battery charging ( → page 14)  
Battery charge status ( → page 14)  
Alarm switched on and wake-up time ( → page 34)  
Current time ( → page 14)  
Current day and month ( → page 14)  
Name of the handset  
Number of new messages:  
◆  on the network mailbox ( → page 31)  
◆  in the list of missed calls ( → page 32)  
◆  in the SMS list (dependent on base) ( → page 31)  
◆  in the list of missed alarms ( → page 32)

## Signalling

External call ( → page 25)



Internal call ( → page 26)



Alarm clock ( → page 34)



Anniversary ( → page 30)



# Contents

---

<b>The handset at a glance</b> .....	<b>1</b>
<b>Safety precautions</b> .....	<b>5</b>
<b>Gigaset C59H – more than just a telephone</b> .....	<b>6</b>
<b>First steps</b> .....	<b>7</b>
Checking the package contents .....	7
Setting up the charging cradle .....	8
Connecting the charging cradle .....	8
Setting up the handset for use .....	9
Registering the handset .....	11
Setting the date and time .....	13
Connecting the headset .....	15
What would you like to do next? .....	16
<b>Using the phone</b> .....	<b>17</b>
Using the control key .....	17
Using the display keys .....	18
Using the keys on the keypad .....	18
Correcting incorrect entries .....	18
Using the menus .....	19
Activating/deactivating the handset .....	20
Activating/deactivating the keypad lock .....	20
Using this guide .....	21
<b>Menu overview</b> .....	<b>23</b>
<b>Making calls</b> .....	<b>25</b>
Making an external call .....	25
Ending a call .....	25
Accepting a call .....	25
Using speaker mode .....	25
Switching to mute .....	26
Making internal calls .....	26
<b>Using the directory and lists</b> .....	<b>27</b>
Using the directory .....	27
Using the redial list .....	30
Using the incoming SMS message list (dependent on base) .....	31
Using call lists .....	31
Opening lists with the message key .....	32
Using the Missed Alarms list .....	32
<b>Using the network mailbox</b> .....	<b>33</b>
Configuring fast access for the network mailbox .....	33
Viewing the network mailbox message .....	33
<b>ECO DECT</b> .....	<b>34</b>

<b>Setting the alarm clock</b> .....	<b>34</b>
<b>Using a handset as a room monitor</b> .....	<b>35</b>
<b>Setting the handset</b> .....	<b>36</b>
Quickly accessing numbers and functions .....	36
Changing the display language .....	37
Setting the display .....	37
Activating/deactivating auto answer .....	38
Changing the speaker/earpiece volume .....	38
Changing ringtones .....	39
Activating/deactivating advisory tones .....	40
Setting your own area code .....	40
Restoring the handset default settings .....	40
<b>Service (Customer Care)</b> .....	<b>41</b>
Questions and answers .....	41
Approval .....	42
Warranty .....	42
<b>Protecting our environment</b> .....	<b>43</b>
<b>Appendix</b> .....	<b>44</b>
Caring for your telephone .....	44
Contact with liquid .....	44
Specifications .....	44
Writing and editing text .....	45
<b>Index</b> .....	<b>47</b>

# Safety precautions

## Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied.



Use only the **recommended, rechargeable batteries** (→ page 44) as this could otherwise result in significant health risks and personal injury.



Using your phone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause an unpleasant humming or whistling noise in hearing aids or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Do not install the base or charging cradle in bathrooms or shower rooms. The base and charging cradle are not splashproof (→ page 44).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your Gigaset to a third party, make sure you also give them the user guide.



Remove faulty bases from use or have them repaired by our Service, as they could interfere with other wireless services.

## Please note

Not all of the functions described in this user guide are available in all countries.

## Gigaset C59H – more than just a telephone

---

Your telephone sets new standards for the way you communicate at home. The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

Your telephone can do a whole lot more:

- ◆ Store anniversaries such as birthdays in your phone and it will remind you of them in advance.
- ◆ Assign important people to one of six VIP groups so you can identify important calls from the ringtone and the colour of the assigned VIP group.
- ◆ To only accept calls when you can see the number, you can set your handset to only ring when the phone number is transmitted.
- ◆ You can assign important numbers to the number keys on your phone (quick dial). The number is then dialled by simply pressing the key.
- ◆ Set the display to large print to increase readability in particularly important screens (e.g., the directory and lists).
- ◆ Set the menu display to suit your individual requirements so that only the most important functions (standard mode) or all functions are displayed (expert mode).
- ◆ Gigaset Green Home — be environmentally aware when using your phone. For more information, see [www.gigaset.com/customercare](http://www.gigaset.com/customercare).

You can find additional information about your telephone at [www.gigaset.com/gigasetc59h](http://www.gigaset.com/gigasetc59h).

**Have fun using your new phone!**

# First steps

---

## Checking the package contents



- 1 One Gigaset C59H handset
- 2 Two batteries
- 3 One battery cover
- 4 One charging cradle
- 5 One power adapter
- 6 One belt clip
- 7 One user guide



## Setting up the charging cradle

The charging cradle is designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the charging cradle on a flat, non-slip surface or mount it on the wall (→ page 46).

### Please note

Pay attention to the range of the base.


This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (→ page 34) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

### Please note:


- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

## Connecting the charging cradle

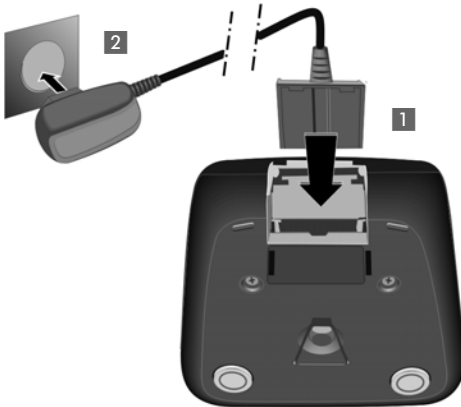

- ▶ Connect the flat plug from the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charging cradle, press the release button **1** and disconnect the plug **2**.

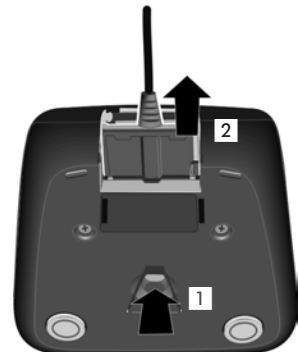

## Setting up the handset for use

The display is protected by a plastic film.  
**Please remove the protective film!**

### Inserting the batteries and closing the battery cover

#### Warning

Use only the rechargeable batteries ( → page 44) recommended by Gigaset Communications GmbH \*, i.e., never use conventional (non-rechargeable) batteries, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

\* Gigaset Communications GmbH is a licensee of the Siemens trademark.

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in/on the battery compartment.



- ▶ First insert the battery cover at the top **a**.
- ▶ Then press the cover **b** until it clicks into place.

To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the casing, then pull the battery cover in an upward direction.



### Attaching the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** — press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** — using your right thumb apply pressure to the centre of the belt clip, push the fingernail of your left index finger between the clip and the casing and lift the clip upwards.



### Placing the handset in the charging cradle

- ▶ Place the handset in the charging cradle with its **display facing forward**.

To charge the batteries, leave the handset in the charging cradle.

**Please note**

Only place the handset in the charging cradle that is intended for it.

## Registering the handset

A Gigaset C59H handset can be registered on up to four bases. You must initiate handset registration on the handset and on the base.

When the registration process has completed successfully, the handset returns to idle status. The handset's internal number is shown in the display e.g., INT 1. If not, repeat the procedure.

### On the handset



- ▶ Press the key below **Register** on the display screen.

A message displays that a search for a base that is ready for registration is being carried out.

#### Please note

If the handset is already registered **to at least one base**, start the registration process as follows:

 →  → Registration → Register Handset

If the handset is already registered to **four** bases, select the required base.

### On the base

Within 60 sec. press and **hold** the registration/paging key on the base (approx. 3 sec.).

#### Please note

For instructions on deregistering the handsets, please consult the base user guide.

## Initial charging and discharging of the batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.



▶ Place the handset in the charging cradle for **ten** hours.




▶ Then remove the handset from the charging cradle and do not replace it until the batteries are fully discharged.

### Please note

- ◆ After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.
- ◆ If you remove the batteries from the handset and reinsert them, always repeat the charging and discharging procedure.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

## Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

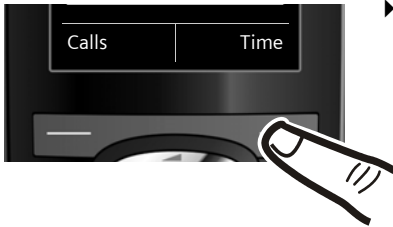

- ▶ Press the key below **Time** on the screen display to open the input field.

(If you have already set the time and date, open the input field via the menu → page 24.)



The Date/Time submenu is shown on the display.

- ▶ The active input position flashes. Enter day, month and year as an 8-digit number via the keypad, e.g.,        for 14/10/2009.



Press the **right** or **left** control key to change the input position and correct an entry.



- ▶ Press **down** on the control key to switch to the Time input field.

- ▶ Enter the hours and minutes in 4-digit format via the keypad, e.g.,     for 07:15 am. Change the input position with the control key if necessary.





► Press the key below **Save** on the display screen to confirm your entry.



The display shows **Saved**. You will hear a confirmation tone and the handset will automatically return to idle status.

### Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example.

#### Displays

◆ Reception signal between the base and handset:

- Poor to good:
- No reception: flashes

**Green:** Eco Mode activated ( → page 34)

◆ Battery charge status:

- Empty to full
- Flashes **red**: batteries almost empty
- Charging

◆ INT 1

Internal name of the handset

If **Eco Mode+** ( → page 34) is activated, the icon is displayed in the top left.

Your phone is now ready for use!



## Connecting the headset



You can connect a headset with a 2.5 mm jack connector, including HAMA and Plantronics M40, MX100 und MX150 headset types.

A compatibility list of tested headsets can be found on the Internet at:  
[www.plantronics.com/productfinder](http://www.plantronics.com/productfinder).



## What would you like to do next?

Now you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.


 
If you are unfamiliar with menu-driven devices such as other Gigaset telephones, be sure to read the section entitled "Using the phone" (→ page 17) first.

Information on ...	... is located here.
Setting the ringtone and volume	▶ page 39
Setting the earpiece volume	▶ page 38
Setting Eco Mode / Eco Mode+	▶ page 34
Transferring directory entries from existing Gigaset handsets to new handset(s)	▶ page 29

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 42) or contact our Customer Care team (→ page 41).

# Using the phone





## Using the control key

Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g.,  for "press right on the control key" or  for "press the centre of the control key".





The control key has a number of different functions:





### When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu to set the call volume (→ page 38) of the handset.


 

 
 

### In the main menu

- , ,  or   
Navigate to the required function.




### In submenus and lists

-  /  Scroll up/down line by line.

### In input fields

Use the control key to move the cursor up , down , right  or left . Press and **hold**  or  to move the cursor **word by word**.

### During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and speaker mode.

### Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.


- ◆ **In idle status** the key opens the main menu.
- ◆ **In submenus, selection and input fields** the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

#### Please note

In these instructions, opening the main menu is represented by pressing right on the control key and functions are confirmed by pressing the corresponding display key. However, if you prefer, you can use the control key as described above.

## Using the display keys


 
The functions of the display keys change depending on the particular operating situation. Example:

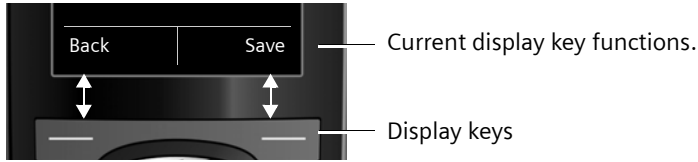


Some important display keys:

Options	Open a menu for further functions.
OK	Confirm selection.
< C	Delete key: delete one character/word at a time from right to left.
Back	Go back one menu level or cancel operation.
Save	Store entry.
→→	Open the redial list.


## Using the keys on the keypad

 /  /  etc.  
Press the matching key on the handset.

  
Enter digits or letters.

## Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** by briefly pressing  or press and **hold** to delete the **word** to the left of the cursor
- ◆ Insert characters next to the cursor
- ◆ Overwrite the highlighted (flashing) character, e.g., when entering time and date.

## Using the menus


Your telephone's functions are accessed using a menu that has a number of levels.

The menu display can be extended (**Expert mode**) or reduced (**Standard mode**). Standard mode is activated by default.

Settings or functions that are only available in expert mode are marked in these instructions with the  icon.


Switching between standard/expert mode and the menu overview (→ page 23).


### Main menu (first menu level)


- ▶ When the handset is in idle status press the **right**  control key to open the main menu.

The main menu functions are shown in the display with icons. The icon for the selected function is marked in orange and the name of the associated function appears in the display's header.

To access a function, i.e., to open the corresponding submenu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.


**Briefly** press the display key **Back** or the end call key  to revert back to idle status.

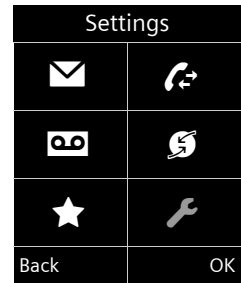


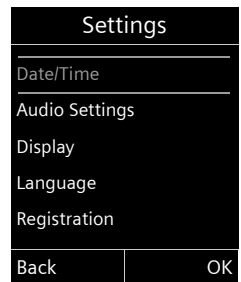
### Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:


- ▶ Scroll to the function with the control key  and press **OK**.

**Briefly** press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.



## Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

▶ Press and **hold** the end call key .

or:

▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display keys **OK**, **Yes**, **Save** or **Change** are lost.

An example of the display in idle status is shown on page 14.

## Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.  
Press and **hold** the end call key again to switch the handset on.

### Please note

When the handset is switched on, an animation of the **Gigaset** logo is displayed for several seconds.

## Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

If the keypad lock is activated a warning is shown when you press a key.

The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is ended.

### Please note



When the keypad lock is active, you cannot call emergency numbers.

## Using this guide

The operating steps are shown in abbreviated form.


**Example:**


The illustration:


 →  → Display → Large Font (☑ = on)

means:




- ▶ Press **right** on the control key  to open the main menu.

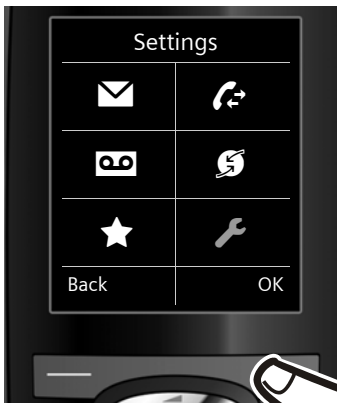

- ▶ Use the right, left, down and up control key  to navigate to the Settings submenu.


- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the Display menu appears on the display.

- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Large Font** menu appears on the display.

 
- ▶ Press the display key **Change** to activate/deactivate the function.



Changes are effective immediately and do not have to be confirmed.

- ▶ Press the key below **Back** on the display to jump back to the previous menu level.

**or**

- ▶ Press and **hold** the end call key  to return to idle status.




# Menu overview

---

## Setting standard or expert mode

The menu display can be extended (**Expert mode**) or reduced (**Standard mode**).

The settings are carried out as follows:

Select  →  → Menu View → Simplified (standard mode) or Complete (expert mode)  
→ **Select** (the active mode is marked with )

Menu options that are only available in expert mode are marked with the  icon.


Open the main menu: When the telephone is in idle status press 

 **SMS** (Menu dependent on base)

 **Call Lists**

All Calls	→ page 31
Outgoing Calls	→ page 31
Accepted Calls	→ page 31
Missed Calls	→ page 31

 **Voice Mail** (Menu dependent on base)






 **Select Services** (Menu dependent on base)

 **Additional Features**

Alarm Clock	→ page 34
Room Monitor	→ page 35





 Settings

Date/Time	→ page 13	
Audio Settings	Handset Volume	→ page 38
	 Advisory Tones	→ page 40
	Ringtones(Handset)	→ page 39
	 Music on hold	<b>(dependent on base)</b>
Display	Screensaver	→ page 37
	Large Font	→ page 38
	Colour Schemes	→ page 38
	 Backlight	→ page 38
Language	→ page 37	
Registration	Register Handset	→ page 11
	De-reg. Handset	<b>(dependent on base)</b>
	Select Base	→ page 11
 Telephony	Auto Answer	→ page 38 <b>(further submenus dependent on base)</b>
 System	Handset Reset	→ page 40 <b>(further submenus dependent on base)</b>
Menu View	Simplified	→ page 23
	Complete	→ page 23



 
## Making calls

 
### Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

or:

  Press and **hold** the talk key  and then enter the number.


You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.


#### Please note

Dialling with the directory (→ page 27), call list (→ page 31) and redial list (→ page 30) saves you from repeatedly keying in phone numbers.



### Ending a call

 Press the end call key.

## Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the speaker key .
- ▶ Pressing the display key **Accept** (dependent on base).

If the handset is in the charging cradle and the **Auto Answer** function is activated (→ page 38), the handset automatically answers the call when you remove it from the charging cradle.



To deactivate the ringtone, press the **Silence** display key. You can accept the call as long as it is displayed on the screen.

### Using speaker mode

In speaker mode, instead of holding the handset to your ear, you can put it down, for example on the table in front of you. This allows others to participate in the call.


### Activating/deactivating speaker mode

#### Activating while dialling

  Enter the number and press the speaker key.


- ▶ Inform your caller before you use the speaker function so that the caller knows someone else may be listening.

#### Switching between earpiece and speaker mode

 Press the speaker key.

Activate/deactivate speaker mode during a call.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the speaker key  while placing the handset in the base.

For instructions on adjusting the loud-speaker volume (→ page 38).

## Switching to mute


 
---

You can deactivate the microphone in your handset during an external call.



Press key to mute the handset. The display shows *Microphone is off*. Press the key again to reactivate the microphone.

### Please note

If the telephone is muted, all keys except the mute key  and the end-call key  will not work.

## Making internal calls

---

Internal calls to other handsets registered on the same base are free.

### Calling a specific handset



Initiate internal call.



Enter the number of the handset.

or:



Initiate internal call.



Select handset.



Press the talk key.

### Calling all handsets ("group call")



Initiate internal call.



Press the star key.

or

Call All

Select menu option and



Press the talk key.

All handsets are called.

### Ending a call



Press the end call key.

## Using the directory and lists

The options are:

- ◆ Directory
- ◆ Redial list
- ◆ Incoming SMS message list (dependent on base)
- ◆ Call lists
- ◆ List of missed alarms
- ◆ (Network mailbox) list

You can create a personalised directory for your own handset. You can also send lists/entries to other handsets (→ page 29).

### Using the directory

You can save up to 150 entries in the directory.


#### Please note

To quickly access a number from the directory (quick dial), you can assign the number to a key (→ page 36).

### Using the directory

In the **directory**, you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ E-mail address
- ◆ Anniversaries with reminder
- ◆ VIP ringtones with VIP symbol.

You open the directory in idle status using the  key.

#### Length of the entries

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 64 characters

### Saving a number in the directory

 → <New Entry>

- ▶ You can enter data in the following fields:

First Name: / Surname:

Enter first names and/or surnames.

If a name is not entered in any of the fields, the telephone number is saved and displayed as the surname.


 

(For instructions on entering text and special characters, please see

→ page 45.)

Phone (Home): / Phone (Office): /

Phone (Mobile):

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a prefixed symbol:  /  / .

E-mail:

Enter the e-mail address.

Anniversary:

Select **On** or **Off**.


With setting **On**:

Enter **Annivers. (Date)** and **Anniversary (time)** and select reminder type:

**Anniversary (tone)** (→ page 29).

VIP Group:

Mark directory entry as **VIP** (Very Important Person).

Each entry can be assigned to one of 6 VIP groups, which are defined by the colour of the  symbol, the name of the VIP group and the corresponding ringtone.

VIP calls are recognised by the ringtone. The background colour of the ringtone animation changes to the colour of the VIP group.

**Prerequisite:** Calling Line Identification.

**Save**

Press the display key.

## Order of directory entries

---

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters



To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

## Select a directory entry

---

 Open directory.



You have the following options:



- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name; if necessary scroll to the entry with the  key.

The directory searches for the surname. If a surname has not been entered, the directory searches for the first name.

## Select from the directory

---



 →  (Select entry)

 Press the talk key.  
(If several numbers have been entered, select the required number and press talk key  again).  
The number is dialled.

## Managing directory entries


---

### Viewing entries



 →  (Select entry)

**View** Press the display key.  
The entry is displayed.

**Options** Press the display key.

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press   after the number is displayed.

#### Delete Entry



Delete selected entry.

#### Copy Entry

to Internal: Send a single entry to a handset (→ page 29).

vCard via SMS: Send a single entry in vCard format via SMS (dependent on base).



### Editing entries

 →  (Select entry)


**View** **Edit** Press the display keys one after the other.

- ▶ Carry out changes and save.




### Using other functions

 →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

#### Display Number

Edit or add to a saved number and then dial with  or save as a new entry; to do this, press   after the number appears on the display.

#### Edit Entry

Edit selected entry.

#### Delete Entry

Delete selected entry.

#### Copy Entry

to Internal: Send a single entry to a handset (→ page 29).

vCard via SMS: Send a single entry in vCard format via SMS (dependent on base).

### VIP Groups

Change the name and ringtone of VIP groups; to do this:

- Select the VIP group → **Edit**
- Change entry → **Save**.

### Delete All

Delete **all** entries in the directory.

### Copy All

to Internal: Send the complete list to a handset (→ page 29).

vCard via Bluetooth: Send the complete list in vCard format via Bluetooth.

### Available Memory

Display the number of entries that are still available in the directory (→ page 27).

## Using shortcut keys

---



- ▶ Press and **hold** the required shortcut key (→ page 36).


## Transferring the directory to another handset

---

### Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 →  (Select entry) → **Options**  
(Open menu) → Copy Entry / Copy All  
→ to Internal

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied - Copy next entry?** prompt with **Yes**.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

### Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ If the phone rings or if the memory of the receiving handset is full, the transfer is cancelled.
- ◆ Pictures and sounds assigned to entries are not transferred.

## Copying the displayed number to the directory

---

You can copy numbers displayed in a list, e.g., the call list or the redial list, or in an SMS (dependent on base) to the directory.

A number is displayed:



**Options** → Copy to Directory


- ▶ Complete the entry (→ page 27).

## Copying a number or e-mail address from the directory

---

In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



- ▶ Depending on the operating situation, open the directory with  or .

 Select entry (→ page 28).


## Storing an anniversary in the directory

---

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: Anniversary: Off).

 →  (Select entry)

**View** **Edit** Press the display keys one after the other.

 Scroll to the Anniversary line.

 Select On.

- ▶ You can enter data in the following fields:

Annivers. (Date)

Enter day/month/year in 8-digit format.

## Using the directory and lists

### Anniversary (time)

Enter the hour/minute for the reminder call in 4-digit format.

### Anniversary (tone)



Select the type of signal for the reminder.

**Save** Press the display key.


#### Please note


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

### Deactivating anniversaries

 →  (Select entry)

**View** **Edit** Press the display keys one after the other.


 Scroll to the Anniversary line.

 Select Off.

**Save** Press the display key.

### Reminder call on an anniversary

In **idle status**, a reminder call is shown in the handset display and indicated by the selected ringtone.

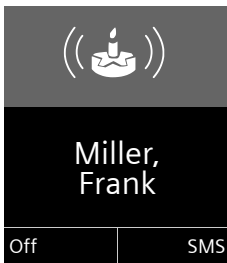

You can:

**SMS** Write an SMS (dependent on base).

**Off** Press the display key to acknowledge and end the reminder call.


**When you are on the phone** a reminder call is indicated on the handset with a **single** advisory tone.


Anniversaries that are indicated during a call and that are elapsed are entered in the **Missed Alarms** list ( → page 32).


## Using the redial list

The redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If one of the numbers is in the directory, the corresponding name is displayed.

### Manual redial


 Press the key **briefly**.


 Select entry.

 Press the talk key again. The number is dialled.


When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

### Managing entries in the redial list

 Press the key **briefly**.

 Select entry.

**Options** Open menu.

The following functions can be selected with :

#### Copy to Directory

Copy an entry to the directory (page 27).

Display Number (as in the directory, page 28)

Delete Entry (as in the directory, page 28)

Delete All (as in the directory, page 29)

## Using the incoming SMS message list (dependent on base)

All received SMS messages are saved in the incoming message list.

## Using call lists

**Prerequisite:** Calling Line Identification (CLIP)

Your telephone stores various types of calls:

- ◆ Accepted calls
- ◆ Outgoing calls
- ◆ Missed calls

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.

When in idle status, open the call lists by selecting the **Calls** display key or via the menu:




 
 
### List entry

 
New messages are displayed at the top.

Example of list entries:

All Calls	
 Frank	
<b>14.10.09, 15:40</b>	
 089563795	
<b>14.10.09, 15:32</b>	
 ...0123727859362922	
14.10.09, 15:07	
View	Options

- ◆ List type (in header)
- ◆ Status of entry
  - Bold:** New entry
- ◆ Number or name of caller

- ◆ Date and time of call (if set, page 13)
- ◆ Type of entry:
  - Accepted calls (  )
  - Missed calls (  )
  - Outgoing calls (  )

Press the talk key  to return the calls selected.

Select the **View** display key to access additional information, including for example the number linked to the name.

Select the **Options** display key to choose from the following options:

**Copy to Directory**

Copy the number to the directory.

**Delete Entry**

Delete selected entry.


**Delete All**

Delete all entries.


When you quit the call lists, all entries are set to the status "old", i.e., the next time you open the call list they will no longer be shown in bold.







## Opening lists with the message key

 
You can use the message key  to open the following list selection:

- ◆ Network mailbox, if your network provider supports this function and fast access is set for the network mailbox (→ page 33).
- ◆ Incoming SMS message list (dependent on base)
- ◆ List of missed calls
- ◆ List of missed alarms (→ page 32)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:


Icon	New message...
	... on the network mailbox
	... in list of <b>missed calls</b>
	... in the SMS list (dependent on base)
	... in the <b>Missed Alarms</b> list:

The number of **new** entries is displayed under the corresponding icon.




### Please note

If calls are saved in the network mailbox and the appropriate settings have been made, you will receive a message (see your network provider user guide).

After pressing the message key  you will see all the lists that contain messages and the network mailbox list.


Lists containing new messages are at the top of the list and are marked in a bold font.

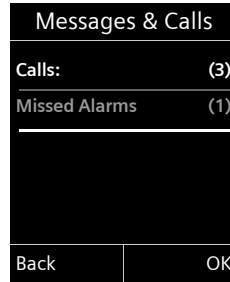

Select a list with . To open, press **OK**.

## Using the Missed Alarms list

Missed anniversaries (→ page 29) are saved in the **Missed Alarms** list if:

- ◆ You do not accept an anniversary.
- ◆ The anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the anniversary.
- ◆ Open the list by pressing the **message key**  (→ page 32).

Each entry is shown with

- ◆ Number or name
- ◆ Date and time

The most recent entry is at the head of the list.

Press the display key **Delete**, to delete the selected entry.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

## Using the network mailbox

---

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

### Configuring fast access for the network mailbox

---



With fast access, you can dial either the network mailbox or your integrated answering machine (dependent on base) directly.

On **bases without an answering machine**, fast access to the network mailbox is preconfigured. You only need to enter the number of the network mailbox.


On **bases with an answering machine**, the integrated answering machine is preconfigured. You can configure the network mailbox instead.

#### Configuring fast access for the network mailbox and entering the network mailbox number

Bases **with** an answering machine:

 →  → Set Key 1

Network Mailbox

Select and press **Select**  
( = selected).

Bases **without** an answering machine:

 →  → Network Mailbox

Continue by:



Entering the number for the network mailbox.

**Save** Pressing the display key.


The setting for fast access applies to all Gigaset C59H handsets.

### Calling the network mailbox



Press and **hold**. You are connected directly to the network mailbox.



Press speaker key  if required. You will hear the network mailbox announcement.

### Viewing the network mailbox message

---

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number is saved in the missed call list and the message key flashes (→ page 32).

## ECO DECT

---

You are helping to protect the environment with your Gigaset C59H.

### Reduced energy consumption

---

Your telephone has a power-saving adapter plug and uses less power.

### Reducing radiation (dependent on base)

---

**The radiation can only be reduced if your base supports this function.**

The transmission power of your telephone is **automatically** reduced depending on the distance to the base.

You can reduce the radiation of the handset and base even further by using Eco Mode or Eco Mode+. For further information, please refer to your base user guide.

## Setting the alarm clock

---

**Prerequisite:** The date and time have already been set (→ page 13).

### Activating/deactivating the alarm clock and setting the wake-up time

---

 →  → Alarm Clock

▶ You can enter data in the following fields:

**Activation:**

Select On or Off.

**Time:**

Enter the wake-up time in 4-digit format.


**Volume:**

Set the volume (1–6).

**Melody:**

Select melody.

**Save** Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ringtone (→ page 2). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is only signalled by a short tone.

### Deactivating the wake-up call/ repeating after a pause (snooze mode)

---

**Prerequisite:** A wake-up call is sounding.

**OFF** Press the display key. The wake-up call is deactivated.

or

**Snooze** Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Using a handset as a room monitor

---

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number is terminated after approximately 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.



If you deactivate then reactivate the handset, the room monitor remains activated.

### Warning!

- ◆ **Always check the operation of the room monitor before use. For example, test its sensitivity. If you are diverting the room monitor to an external number, check the connection.**
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charging cradle. This ensures that the battery does not run down.
- ◆ Ideally position the handset 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

## Activating the room monitor and entering the destination number

---

 →  → Room Monitor


- ▶ You can enter data in the following fields:

Activation:

Select **On** to activate.

Alarm to:

Select **Internal** or **External**.

**External number:** Select the number from the directory (press display key ) or enter it directly.


**Internal number:** Select display key **Change** → Select handset or **Call All** if you want to call all registered handsets → **OK**.

In idle status, the destination number or the internal destination number is displayed.

- ▶ Press **Save** to save the settings.

## Setting the handset

When the room monitor function is activated, the idle display looks as shown below:

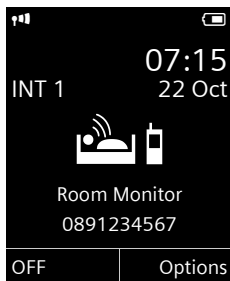

## Changing the set destination number

☰ → ★ → Room Monitor

- ▶ Enter and save number as described under "Activating the room monitor and entering the destination number" (→ page 35).

## Cancel/deactivate room monitor

Press the end call key  to cancel the call when the **room monitor is activated**.

**In idle status** press the display key **OFF** to deactivate room monitor mode.

## Deactivating the room monitor remotely

**Prerequisites:** The phone must support tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys **9** **#**.

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g., no ringtone) on the handset will remain activated until you press the display key **OFF** on the handset.

To reactivate the room monitor function with the same phone number:

- ▶ Reactivate and save with **Save** (→ page 35).

## Setting the handset

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

## Quickly accessing numbers and functions

You can assign a **number from the directory** to each of the **digit keys** **0+** and **2 ABC** to **WXYZ9**.

The left and right **display keys** have a **function** pre-selected by default. You can change the assignment (→ page 37).

The number is then dialled or the function started by simply pressing a key.

## Assigning digit keys (quick dial)

**Prerequisite:** You have not yet assigned a number to the digit key.

- ▶ Press and **hold** the digit key.  
**or**  
Press the digit key **briefly** and press the **QuickDial** display key.

The directory opens.

- ▶ Select an entry and press **OK**.

The entry is saved to the appropriate digit key.

### Please note

If you delete or edit the entry in the directory at a later date, this will not affect the assignment to the number key.

## Dialling a number/changing assignment

---

**Prerequisite:** The digit key already has a number assigned to it.

When the handset is in idle status

- ▶ Press and **hold** the digit key.  
The number is dialled immediately.

or

- ▶ **Briefly** press the digit key:  
Press the display key with number/ name (abbreviated if necessary) to dial the number

or

Press the **Change** display key to change the digit key assignment or to delete the assignment.

## Changing display key assignments

---

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened. The following can be selected:

### Room Monitor

Assign menu for setting and activating the room monitor to a key  
(→ page 35).

### Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 34).

### Redial

Display the redial list.

### More Functions...

More features are available:

#### INT

Internal calls (→ page 26).

#### SMS (dependent on base)



Assign menu for SMS functions to a key.


- ▶ Select an entry and press **OK**.

## Changing the display language

---

You can view the display texts in different languages.

 →  → Language


The current language is indicated by a .

 Select language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  → 

Press keys in sequence and confirm by selecting **OK**.

 Select the correct language and press the **right display key**.

## Setting the display


---

### Setting the screensaver

---

You can set a picture or the time to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g., during a call or if the handset is deregistered.

If a screensaver is activated, the Screensaver menu option is marked with .

 →  → Display → Screensaver

The current setting is displayed.

- ▶ You can enter data in the following fields:

Activation:


Select On (screensaver is displayed) or Off (no screensaver).

Selection :


Select screensaver **or**

**View** Press the display key.  
The active screensaver is displayed.

## Setting the handset

 Select screensaver and press **OK**.

**Save** Press the display key.

When the screensaver conceals the display, **briefly** press  to show the idle display.

## Setting large font

You can increase the font size of print and symbols in selection fields, lists and in the directory to improve readability. After doing this, only one entry instead of multiple entries can be shown at the same time on each display and names are shortened where necessary.

 →  → Display → Large Font

**Change** Press display key ( = on).

## Setting the colour scheme

You can set the display to have a dark or light background.

 →  → Display → Colour Schemes

Select Colour Scheme 1 or Colour Scheme 2 and press **OK**.

## Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

▶ You can enter data in the following fields:

In Charger

Select On or Off.

Out of Charger

 
Select On or Off.

### Please note

With the On setting, the standby time of the handset can be significantly reduced.

**Save** Press the display key.

## Activating/deactivating auto answer

When this function is activated, when a call arrives, you can simply lift the handset out of the charging cradle without having to press the talk key .


 →  → Telephony → Auto Answer


**Change** Press display key ( = on).


## Changing the speaker/earpiece volume

You can set the loudspeaker volume for speaker mode and the earpiece volume to five different levels.

In idle status:

 Call up the Handset Volume menu.


 Set the earpiece volume.

 Scroll to the Speaker: line.

 Set the speaker volume.


**Save** Press the display key if necessary to save the setting permanently.

Setting the volume during a call:

 Press the control key.

 Select volume.

The setting will automatically be saved after approximately 3 seconds, if not then press the display key **Save**.

If  is assigned a different function:

**Options** Open menu.

Volume Select and press **OK**.



Configure setting (see above).

### Please note

You can also set the call volume using the menu (→ page 24).

## Changing ringtones

---

- ◆ **Volume:**  
You can choose between five volumes (1–5; e.g., volume 3 = ) and the "crescendo" ringtone (6; volume increases with each ring = .
- ◆ **Ringtones:**  
You can select a ringtone from a list of pre-loaded ringtones.



You can set different ringtones for the following functions:




- ◆ Int. Calls
- ◆ Extern. Calls

## Setting volume/melody

---

In idle status:

 →  → Audio Settings  
→ Ringtones(Handset)  
→ Volume / Melodies



-  Set volume/melody for internal calls and anniversaries.
  -  Scroll to the next line.
  -  Set volume/melody for external calls.
- Save** Press the display key to save the setting.

## Switching the ringtone on/off for anonymous calls

---

If a caller withholds their number, you can set your handset not to ring. The call will only be signalled in the display.

In idle status:

 →  → Audio Settings  
→ Ringtones(Handset)  
→ Anon. Calls Silent

 

Press **Change** to activate/deactivate the function ( = on).

## Activating/deactivating the ringtone

 
---

You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

### Deactivating the ringtone permanently

 Press and **hold** the star key. The  icon appears in the display.

### Reactivating the ringtone

 Press and **hold** the star key.

 
### Deactivating the ringtone for the current call

 
**Silence** Press the display key.

## Activating/deactivating the alert tone

---

In place of the ringtone you can activate an alert tone. When you receive a call, you will hear a **short tone** ("Beep") instead of the ringtone.

 Press and **hold** the star key and **within 3 seconds:**

**Beep** Press the display key. A call will now be signalled by **one** short alert tone. The  icon appears in the display.





## Activating/deactivating advisory tones

---

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key tone:** every key press is confirmed.
- ◆ **Acknowledge tones:**
  - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the call list
  - **Error tone** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone:** when scrolling to the end of a menu
- ◆ **Battery low beep:** the battery requires charging.

In idle status:


 →  → Audio Settings  
→ Advisory Tones

▶ You can enter data in the following fields:

Key Tones:  
Select On or Off.

Confirmation:  
Select On or Off.

Battery:  
Select On or Off.

 Press the display key.

### Please note

You can also set the call volume, the ringtones and the advisory tones via the menu (→ page 24).

## Setting your own area code

---

To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.


Some of these numbers are already pre-set.


 →  → Telephony → Area Codes


Check that the (pre)set area code is correct.

 
▶ You can enter data in the following fields:

 Select/change input field.


 Navigate in the input field.

 If necessary, delete number: press the display key.

 Enter number.

 Press the display key.

### Example:

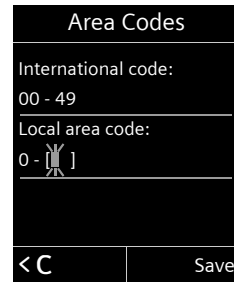

## Restoring the handset default settings


---

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset:

- ◆ Registration to the base
- ◆ Date and time
- ◆ Directory entries, the call lists, the SMS lists

 →  → System → Handset Reset

 Press the display key.

## Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi.....	97 12 62 23 800	Jordan .....	00962 6 5625460/1/2
Argentina .....	0800-888-9878	Kuwait.....	00965-2464993
Australia .....	1300 780 878	Latvia.....	7 50 11 18
Austria .05 17 07 50 04 (0,065 Euro/Min.)		Lebanon.....	00961-1236110
Bahrain.....	97 31 73 11 173	Luxembourg .....	00352 438 43399
Belgium .....	0 78 15 66 79	Malaysia.....	603 77124304
Bosnia Herzegovina .....	033 276 649	Malta .....	+353 21 4940 632
Brazil.....		Mexico..01800 999 4442738 (01800 999 Gigaset)	
Grande Capitais e Regiões Metropolitanas: .....	(11) 4003 3020	Netherlands .....	0900-3333102 (0,25 Euro/min.)
Demais localidades: .....	0800 888 3020	New Zealand .....	0800 780 878
Bulgaria.....	02 873 94 88	Norway .....	22 70 84 00
Canada .....	866 247 8758	Oman.....	96 82 47 09 281
China ....	0 21 400 670 6007 (RMB 0.11)	Poland .....	0 801 140 160
Croatia .....	01 / 2456 555 (0,27 Kn)	Portugal .....	(351) 808 781 223
Czech Republic .....	233 032 727	Romania .....	+4.021.529.7114.
Denmark.....	35 25 86 00	Russia.....	8 (495) 228 1312
Dubai .....	97 14 39 69 944	Serbia.....	0800 222 111
Egypt.....	202 7623441	Singapore .....	6735 9100
Finland .....	09 23 11 34 25	Slovak Republic .....	02 59 68 22 66 (4,428 sk)
France...01 56 38 42 00 coût d'un appel national		Slovenija .....	0 14 74 63 36
Germany.....	01805 333 222	South Africa.....	08 60 10 11 57
(0,14 Euro/Min. aus dem Festnetz der Deutschen Telekom.		Spain .....	902 103935
Für Anrufe aus den Mobilfunknetzen können abweichende Preise gelten)		Sweden .....	08 750 99 11
Greece .....	801 1000 500 (0,026 Euro)	Switzerland .....	0848 212 000 (0,08 SFr./Min.)
Hong Kong .....	2763 0203	Taiwan .....	02 266 24343
.....	2389 7285	Thailand.....	02 722 1118
Hungary .....	06 14 71 24 44 (27 Ft)	Turkey .....	0216 459 98 59
India .....	Please refer to your local warranty card	Ukraine .....	+380-44-451-71-72
Ireland .....	18 50 77 72 77	United Arab Emirates .....	0 43 66 03 86
Israel.....	1 700 700 727	United Kingdom .....	0 84 53 67 08 12
Italy.....	199.15.11.15	USA .....	1-866 247-8758
		.....	(toll free)

Please have your record of purchase ready when calling.


Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Questions and answers


If you have any queries about the use of your telephone, visit our website at [www.gigaset.com/customercare](http://www.gigaset.com/customercare) for assistance 24/7.

For information about interception safety, go to [www.gigaset.com/de/dect-sicherheit](http://www.gigaset.com/de/dect-sicherheit).

The table below contains a list of common problems and possible solutions.

<p><b>The display is blank.</b></p> <ol style="list-style-type: none"><li>1. The handset is not switched on.<ul style="list-style-type: none"><li>▶ Press and <b>hold</b> the end call key .</li></ul></li><li>2. The battery is empty.<ul style="list-style-type: none"><li>▶ Charge the battery or replace it (→ page 9).</li></ul></li></ol>
<p><b>Not all menu options are displayed.</b></p> <p>The menu display is reduced (<b>Standard mode</b>).</p> <ul style="list-style-type: none"><li>▶ Activate extended menu display (<b>Expert mode</b>) (→ page 23).</li></ul>
<p><b>No Base flashes on the display.</b></p> <ol style="list-style-type: none"><li>1. The handset is outside the range of the base.<ul style="list-style-type: none"><li>▶ Move the handset closer to the base.</li></ul></li><li>2. The range of the base is reduced because Eco mode is activated.<ul style="list-style-type: none"><li>▶ Deactivate Eco mode (→ page 34) or reduce the distance between the handset and the base.</li></ul></li><li>3. The base is not switched on.<ul style="list-style-type: none"><li>▶ Check the power adapter of the base.</li></ul></li></ol>
<p><b>Please register handset flashes on the display.</b></p> <p>Handset has not been registered with the base or has been deregistered.</p> <ul style="list-style-type: none"><li>▶ Register the handset (→ page 11).</li></ul>
<p><b>Handset does not ring.</b></p> <ol style="list-style-type: none"><li>1. The ringtone is deactivated.<ul style="list-style-type: none"><li>▶ Activate the ringtone (→ page 39).</li></ul></li><li>2. Call divert set for "All Calls".<ul style="list-style-type: none"><li>▶ Deactivate call divert (refer to base user guide).</li></ul></li><li>3. The telephone only rings when the phone number is transmitted.<ul style="list-style-type: none"><li>▶ Switch on the ringtone for anonymous calls (→ page 39).</li></ul></li></ol>

### The other party cannot hear you.

You have pressed the mute key .  
The handset is "muted".

- ▶ Reactivate the microphone (→ page 26).

### You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation.
  - Watch the display and refer to the user guide if necessary.

### Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

## Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

 0682

## Protecting our environment

---

### Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).

### Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

**ISO 14001 (Environment):** certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Ecological energy consumption

The use of ECO DECT (→ page 34) saves energy and makes an active contribution towards protecting the environment.

### Disposal

---

Do not dispose of batteries in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

## Appendix

---

### Caring for your telephone

---

- ▶ Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth as this can cause static.

### Contact with liquid

---

If the handset should come into contact with liquid:

1. **Switch the handset off and remove the battery immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will usually be able to use it again.

## Specifications

---

Technology: Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh. We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Yuasa AAA 800 mAh

The device is supplied with two approved batteries.

### Handset operating times/charging times

---

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times and apply when the display backlight is switched off).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)	160	185	210	260
Talktime (hours)	10	12	13	17
Operating time for 1.5 hrs of calls per day (hours)	85	100	115	140
Charging time in charging cradle (hours)	6,5	7,5	8,5	10,5

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

[www.gigaset.com/customercare](http://www.gigaset.com/customercare)

## General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)

## Writing and editing text

The following rules apply when writing text:

- ◆ Each key between **[0+]** and **[WXYZ9]** is assigned several letters and characters.
- ◆ Control the cursor with Press and **hold** or to move the cursor **word by word**.
- ◆ Characters are inserted at the cursor position.
- ◆ Press the star key **[\* a]** to display the table of special characters. Select the required character and press the display key **Insert** to insert the character at the cursor position.
- ◆ Press and **hold** **[0+]** to **[WXYZ9]** to insert digits.
- ◆ Press **<C** display key to delete the **characters** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.

- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Writing an SMS/names

Press the relevant key several times to enter letters/characters.

If you press and **hold** a key, the corresponding digit is inserted.

## Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
<b>[1 AD]</b>				1						
<b>[2 ABC]</b>	a	b	c	2	ä	á	à	â	ã	ç
<b>[DEF 3]</b>	d	e	f	3	ë	é	è	ê		
<b>[4 GHI]</b>	g	h	i	4	ï	í	ì	î		
<b>[5 JKL]</b>	j	k	l	5						
<b>[MNO 6]</b>	m	n	o	6	ö	ñ	ó	ò	ô	õ
<b>[7 PQRS]</b>	p	q	r	s	7	ß				
<b>[8 TUV]</b>	t	u	v	8	ü	ú	ù	û		
<b>[WXYZ 9]</b>	w	x	y	z	9	ÿ	ý	æ	ø	å
<b>[0+]</b>	.	,	?	!	0					

- 1) Space
- 2) Line break

## Setting upper/lower case or digits

Press the hash key **[\* #]** **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key **[\* #]** **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.

# Accessories

---

## Ordering Gigaset products


You can order Gigaset products from your specialist retailer.



Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

## Mounting the charging cradle on the wall

---

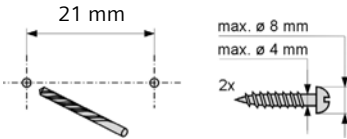

approx.  
4 mm



# Index

---

## A

- Accepting a call . . . . . 25
- Accessories . . . . . 46
- Acknowledge tones . . . . . 40
- Activating
  - advisory tones . . . . . 40
  - auto answer . . . . . 38
  - handset . . . . . 20
  - keypad lock . . . . . 20
  - room monitor . . . . . 35
- Advisory tones . . . . . 40
- Alarm clock . . . . . 34
- Alert tone . . . . . 39
- Anniversary . . . . . 29
  - deactivating . . . . . 30
  - missed . . . . . 32
  - saving in the directory . . . . . 29
- Answering machine, see also  
  Network mailbox
- Approval . . . . . 42
- Area code
  - setting own area code . . . . . 40
- Assigning a number key . . . . . 36
- Auto answer . . . . . 25, 38

## B

- Battery
  - charging . . . . . 1, 2, 12
  - display . . . . . 1, 2
  - icon . . . . . 1, 2
  - inserting . . . . . 9
  - tone . . . . . 40
- Birthday, see Anniversary

## C

- Call
  - ending . . . . . 25
  - external . . . . . 25
  - internal . . . . . 26
- Call duration . . . . . 25
- Call lists . . . . . 31
- Calling
  - external . . . . . 25
  - internal . . . . . 26
- Care of the telephone . . . . . 44
- Changing
  - display language . . . . . 37

- earpiece volume . . . . . 38
- ringtone . . . . . 39
- speaker volume . . . . . 38
- Character set . . . . . 45
- Charge status display . . . . . 1, 2
- Colour scheme . . . . . 38
- Confirmation tone . . . . . 40
- Connecting the headset . . . . . 15
- Control key . . . . . 1, 17
- Correcting incorrect entries . . . . . 18

## D

- Deactivate anonymous calls . . . . . 39
- Deactivating
  - advisory tones . . . . . 40
  - auto answer . . . . . 38
  - handset . . . . . 20
  - keypad lock . . . . . 20
  - room monitor . . . . . 36
- Delete key . . . . . 18
- Deleting
  - characters . . . . . 18
- Destination number (room monitor) . . . . . 35
- Dialling
  - using quick dial . . . . . 29, 36
  - using the directory . . . . . 28
- Directory . . . . . 27
  - copying number from text . . . . . 29
  - managing entries . . . . . 28
  - opening . . . . . 17
  - order of entries . . . . . 28
  - saving anniversary . . . . . 29
  - saving entry . . . . . 27
  - sending entry/list to handset . . . . . 29
  - using to enter numbers . . . . . 29
- Display
  - backlight . . . . . 38
  - changing display language . . . . . 37
  - colour scheme . . . . . 38
  - directory memory . . . . . 29
  - in idle status . . . . . 14, 20
  - missed alarms . . . . . 32
  - network mailbox message . . . . . 33
  - screensaver . . . . . 37
  - setting . . . . . 37
- Display keys . . . . . 1, 18
  - assigning . . . . . 36
- Display symbols . . . . . 2
- Disposal . . . . . 43



## Index

- E**
- Earpiece volume ..... 38
- ECO DECT ..... 34
- Editing
  - destination number (room monitor) ..... 36
- E-mail address
  - copying from the directory ..... 29
- End call key ..... 1, 25
- Ending, call ..... 25
- Entry
  - saving (network mailbox) ..... 33
  - selecting from directory ..... 28
- Environment ..... 43
- Error tone ..... 40
- Expert mode ..... 23, 41
- F**
- Fast access, network mailbox ..... 33
- G**
- General troubleshooting ..... 41
- Group call ..... 26
- H**
- Handset
  - activating/deactivating ..... 20
  - advisory tones ..... 40
  - colour scheme ..... 38
  - contact with liquid ..... 44
  - de-registering ..... 11
  - display backlight ..... 38
  - display language ..... 37
  - earpiece volume ..... 38
  - idle status ..... 20
  - large font ..... 38
  - list ..... 17
  - mode ..... 25
  - muting ..... 26
  - registering ..... 11
  - restoring to factory settings ..... 40
  - screensaver ..... 37
  - set up for use ..... 9
  - setting ..... 36
  - speaker volume ..... 38
  - using room monitor ..... 35
- Handset operating time
  - in room monitor mode ..... 35
- Hash key ..... 1, 20
- Headset socket ..... 15
- Hearing aids ..... 5
- Help ..... 41
- I**
- Icon
  - alarm clock ..... 34
  - for new messages ..... 32
  - keypad lock ..... 20
  - ringtone ..... 39
- Icons
  - display ..... 2
- Idle status
  - display ..... 14, 20
  - returning to ..... 20
- Incorrect input (correction) ..... 18
- Installing the base ..... 8
- Internal call ..... 26
- K**
- Key
  - assign function or number ..... 36
- Key 1 (fast access) ..... 1
- Keypad lock ..... 20
- Keys
  - control key ..... 1, 17
  - delete key ..... 18
  - display keys ..... 1, 18
  - end call key ..... 1, 25
  - fast access ..... 1
  - hash key ..... 1, 20
  - message key ..... 1
  - mute key ..... 1
  - On/Off key ..... 1
  - quick dial ..... 29
  - recall key ..... 1
  - speaker key ..... 1
  - star key ..... 1
  - talk key ..... 1, 25
- L**
- Language, display ..... 37
- Large font ..... 38
- List
  - call lists ..... 31
  - handsets ..... 17
  - missed calls ..... 31
  - network mailbox ..... 32
  - SMS list ..... 32
- Lock
  - activating/deactivating keypad lock ..... 20

**M**

- Making calls
  - accepting a call . . . . . 25
  - external . . . . . 25
  - internal . . . . . 26
- Manual redial . . . . . 30
- Medical equipment . . . . . 5
- Memory
  - directory . . . . . 29
- Menu
  - end tone . . . . . 40
  - opening . . . . . 17
  - overview . . . . . 23
  - prompting . . . . . 19
- Menu display
  - Expert mode . . . . . 23, 41
  - Standard mode . . . . . 23, 41
- Message key . . . . . 1
  - opening lists . . . . . 32
- Microphone . . . . . 1
- Missed calls . . . . . 31
- Mute key . . . . . 1
- Muting the handset . . . . . 26

**N**

- Network mailbox . . . . . 33
- Number
  - as destination for room monitor . . . 35
  - copying from directory . . . . . 29
  - copying to the directory . . . . . 29
  - entering network mailbox number . . 33
  - entering with directory . . . . . 29
  - saving in directory . . . . . 27

**O**

- On/Off key . . . . . 1
- Order in directory . . . . . 28

**P**

- Package contents . . . . . 7
- Power adapter . . . . . 5

**Q**

- Questions and answers . . . . . 41
- Quick dial . . . . . 27, 36

**R**

- Range . . . . . 8
- Recall key . . . . . 1
- Redial . . . . . 30
- Registering (handset) . . . . . 11

- Reminder call . . . . . 30
- Ringtone
  - changing . . . . . 39
  - setting volume . . . . . 39
- Room monitor . . . . . 35

**S**

- Screensaver . . . . . 37
- Search directory . . . . . 28
- Sending
  - directory entry to handset . . . . . 29
- Setting the date . . . . . 13, 24
- Setting the time . . . . . 13, 24
- Setting up the handset . . . . . 9
- Signal tone, see Advisory tones
- SMS
  - list . . . . . 32
  - writing . . . . . 45
- Snooze mode . . . . . 34
- Sound, see Ringtone
- Speaker key . . . . . 1
- Speaker mode . . . . . 25
- Specifications . . . . . 44
- Standard mode . . . . . 23, 41
- Star key . . . . . 1

**T**

- Talk key . . . . . 1, 25

**V**

- Viewing the network mailbox
  - message . . . . . 33
- VIP group (directory entry) . . . . . 27, 29
- Volume
  - earpiece . . . . . 38
  - handset speaker volume . . . . . 38
  - loudspeaker . . . . . 38
  - ringtone . . . . . 39

**W**

- Warning tone, see Advisory tones
- Warranty . . . . . 42
- Writing and editing text . . . . . 45